




www.dynam-rc.com

Before commencing assembly, Please read the instruction manual!

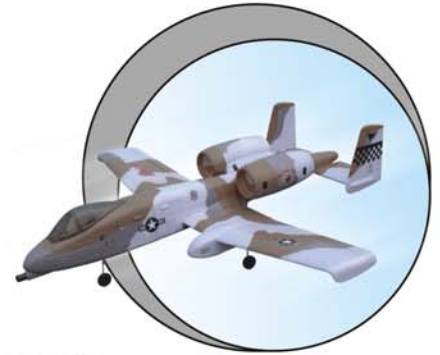

A-10
EDF RC JET

Specification

- **Wingspan:** 1080mm
- **Length:** 995mm
- **Servo:** 9g, 4pcs
- **Transmitter:** 2.4g, 4ch
- **Motor:** kv3300, 2pcs install
- **ESC:** 40amp, 2pcs
- **Weight:** 1000g



Warning!

SAFETY PRECAUTIONS

This radio control model is not a toy!

- First-time builders should seek advice from people having building experience in order to assemble the model correctly and to produce its performance to full extent.
- Assemble this kit only in places out of children's reach!
- Take enough safety precautions prior to operating this model. You are responsible for this model's assembly and safe operation!
- Always keep this instruction manual ready at hand for quick reference, even after completing the assembly.

Shen Zhen Dynam Industry & Trade Co.,LTD

CE 0678 ! FC  

TEL:+86-769-87566018 FAX:+86-769-87555185 E-mail:sales@dynam-rc.com

MADE IN CHINA

Safety Precautions

- Never fly the Airplane where there are crowds of people ,power lines overhead, automobiles or near highways. give yourself plenty of room for flying, as the plane can travel at a high rate of speed. Remember you are responsible for the safety of others.
- Do not fly in strong winds.
- Do not attempt to catch the Airplane while flying.
- Children under the age of 16 should not have admission to the transmitter for the plane.
- Never leave this system unattended, with the batteries in the unit and around children. Injury can result by children turning on the transmitter or the plane.
- Keep away from the propeller at all times. The system can automatically start when the batteries are plugged in, regardless if the transmitter is in the on or off position. The propeller can cause injury!
- Before flying, always remember to turn on the transmitter first, before plugging in the battery pack. Stay clear of propeller.
- Always turn the speed controller all the way down and the switch on “OFF”.(left control stick in the down position) before starting; otherwise the propeller will start on full power when you plug the battery into the plane.
- After running the motor, disconnect the battery first before turning off the transmitter, otherwise the propeller may start at full power.
- Never leave the charger or battery near wet areas.
- Completely discharging a Li-poly battery can result in permanent damage to the cells of the battery. Therefore you must always remember to disconnect the battery after using the plane.

BEFORE YOU BEGIN

- Read through the manual before you begin, so you will have an overall idea of what to do.
- Check all parts. If you find any defective or missing parts contact your local dealer. Please DRY FIT and check for defects for all parts that will require CA or Epoxy for final assembly. Any parts you find to be defective after the gluing process may be difficult to remove for warranty replacement. The manufacturer will replace any defective parts, but will be difficult to extend to the good parts that are good before bluing to defective parts during assembly.
- Symbols used throughout this instruction manual comprise of following:



Apply epoxy glue



Assemble left and right sides the same way.



Pay close attention here!



Pliers



Ensure smooth non-binding movement while assembling.




Cut off shaded portion

How to use your dynam 2.4G rc system

* important

- 1:put down throttle sticker.
- 2:turn on transmitter power-switch.
- 3:please let your receiver connect with battery in 10 seconds.
- 4:check your protect-switch,
when protech-switch in up station,put down,release from protect.
when protech-switch in down station,put up frist,then put down
again,release from protect,you can fly now.

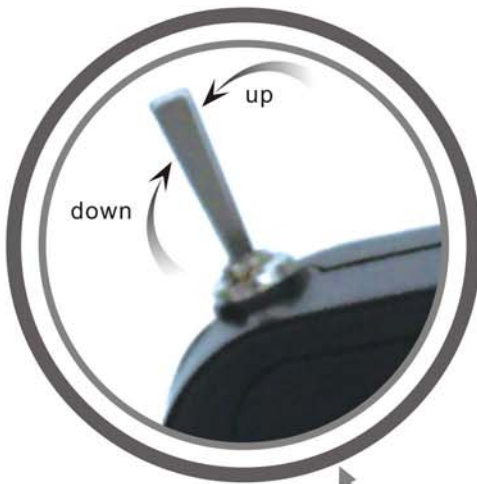

Protect-switch



servo degree-adjust
knob clockwise,
all servo drgree augment

RTF INCLUDING




RTF including: _____

- fuselage
- wing
- elevator
- vertical stabilizer
- landing gear
- plastic parts set
- push rod
- glue
- decal
- balance charger
- LI-Po battery (11.1V 2200mAh 20C)
- transmitter
- Adaptor
- Propeller
- ESC

Assembly



- 1** Apply some glue on the fuselage slot and the area of contact for the stab.
Apply some glue around of plastic front-landing gear.
Fix the front-landing gear in the fuselage slot.

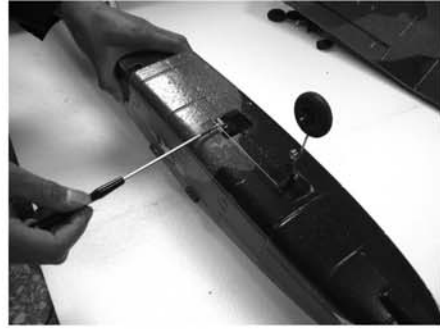

- 2** Fix the steel-link to the land gear and servo quick-controller .
Secure the nut using glue .




- 3** Apply some glue on the fuselage ,apply some glue on the contact area of EDF foam parts slot .



- 4** Put the Speed-controller into the fuselage.




- 5** Glue the EDF parts fin in the fuselage.

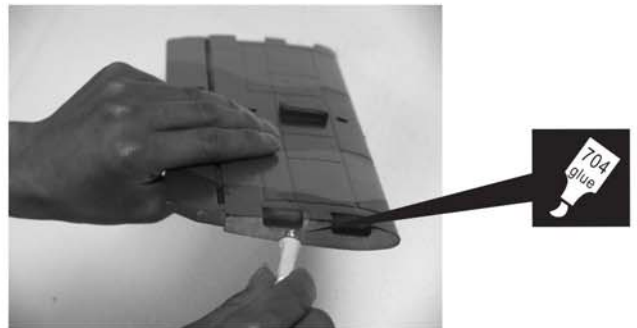


- 6** Apply some glue on the vertical fin.

Assembly

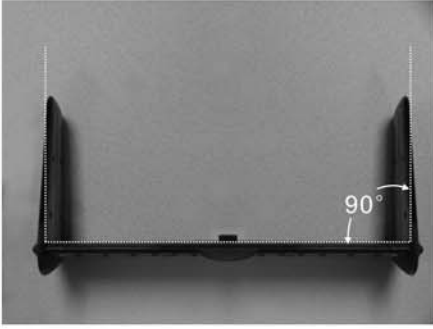

- 7** Apply some glue on the horizontal tail fin.
Slide the vertical fin in the place.
Check for collect alignment.

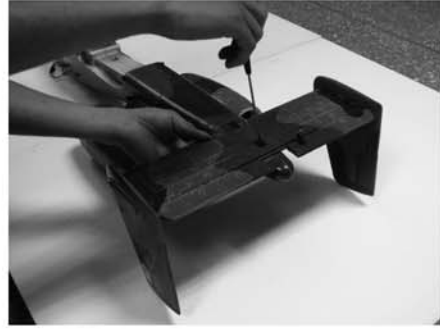

- 8** Secure the nut (PA2.3*20mm).



- 9** Apply some glue on the slot of wing land gear .
Apply some glue around the land gear .
Fix the land gear in the main wing .



- 10** Connect the aileron servo to Y-wire from channel 1 of the receiver.
Check the polarity.



- 11** Put the screw (PA2.3*20mm) into the plastic part.
Use the bolt to fix the wing on the fuselage.



- 12** Put the steel-link (1.2*151mm) in the servo control horn.
Use the bolt to secure the nut of quick-controller.




STICK OPERATION

MODE 1



MODE 2

MOVEMENT


THROTTLE

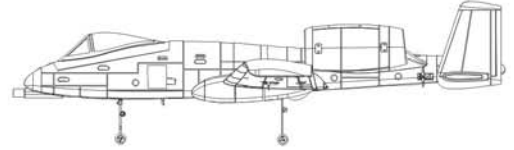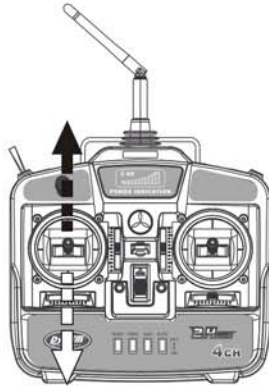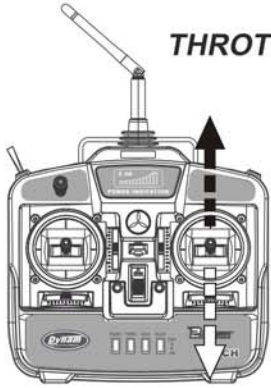

RUDDER


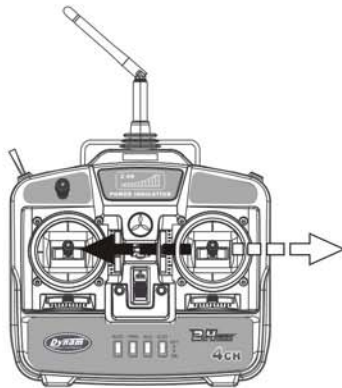
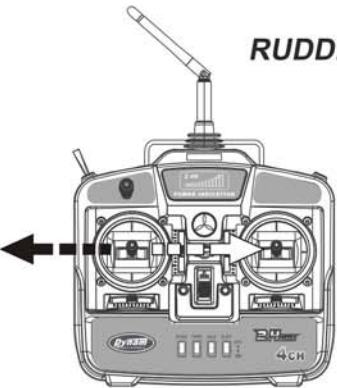


airplane action

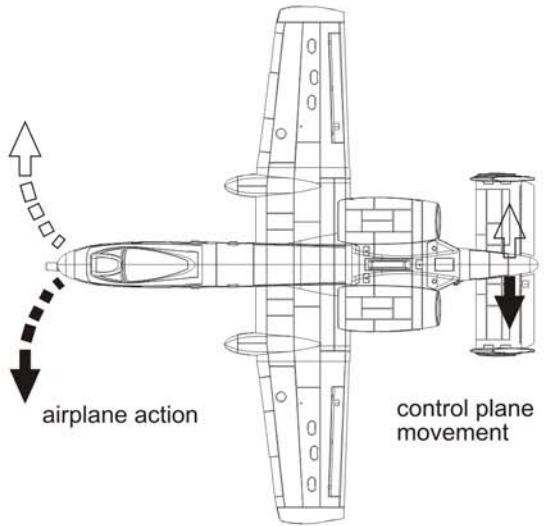


control plane movement

ELEVATOR

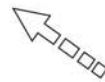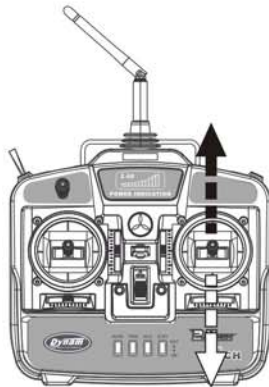
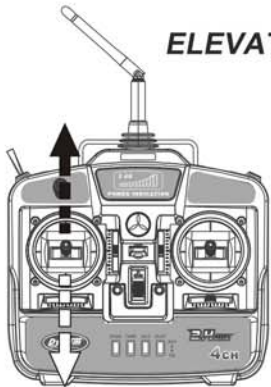


airplane action

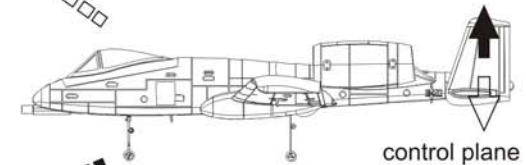


control plane movement

AILERONS

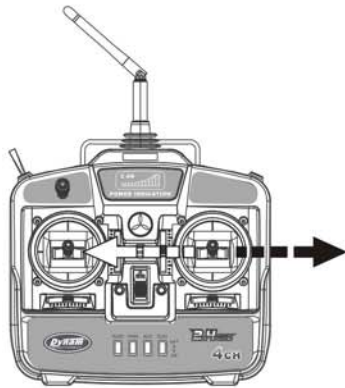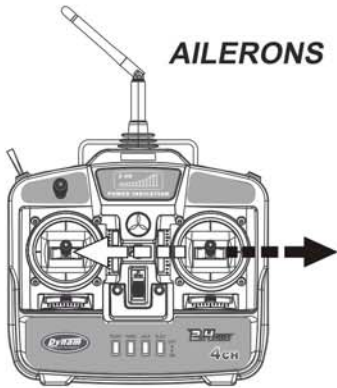

airplane action


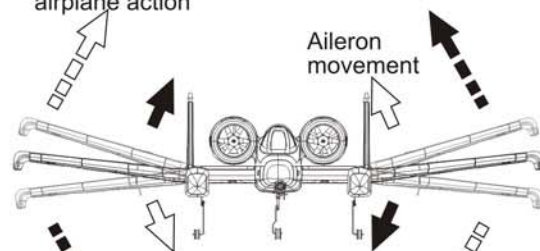


Aileron movement


airplane action

CG And Receiver Assembling


The ideal C.G. position is 70~75mm behind the leading edge measured at where the wing meets the fuselage. In order to obtain the C.G. specified, add weight to the fuselage or move the battery position. Check the C.G. before flying.

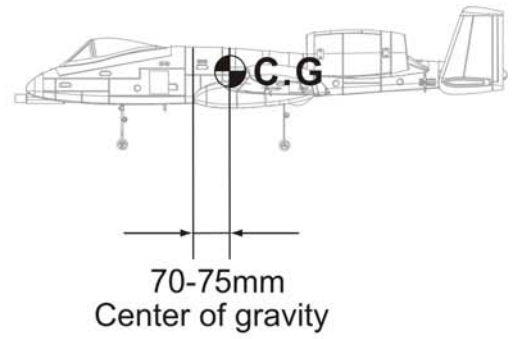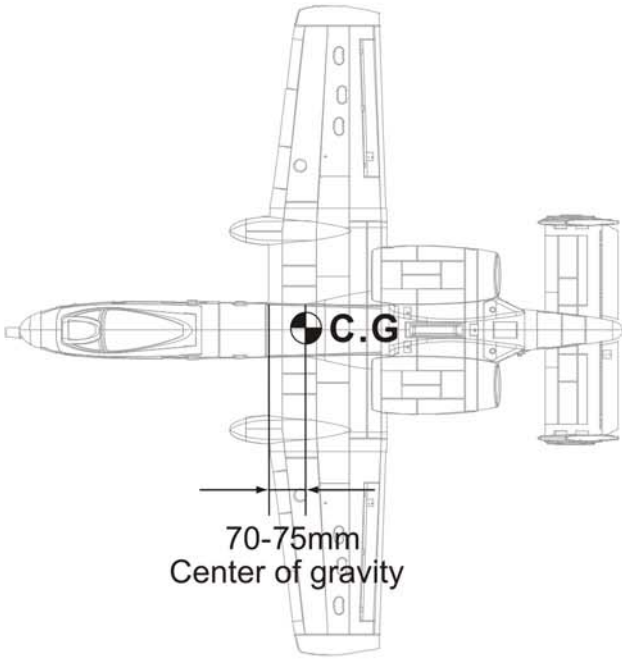


SUGGEST CONTROL THROW SETTING

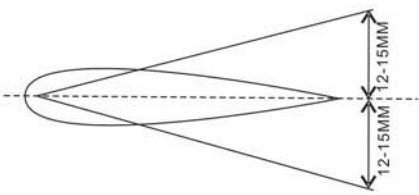

ELEVATOR

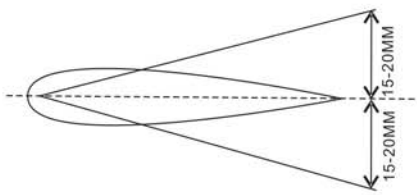


AILERON

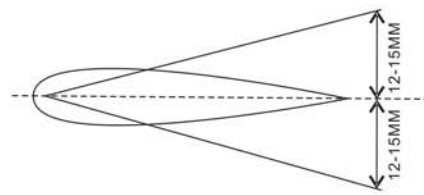


RUDDER

R/C system & wiring



EDF power system

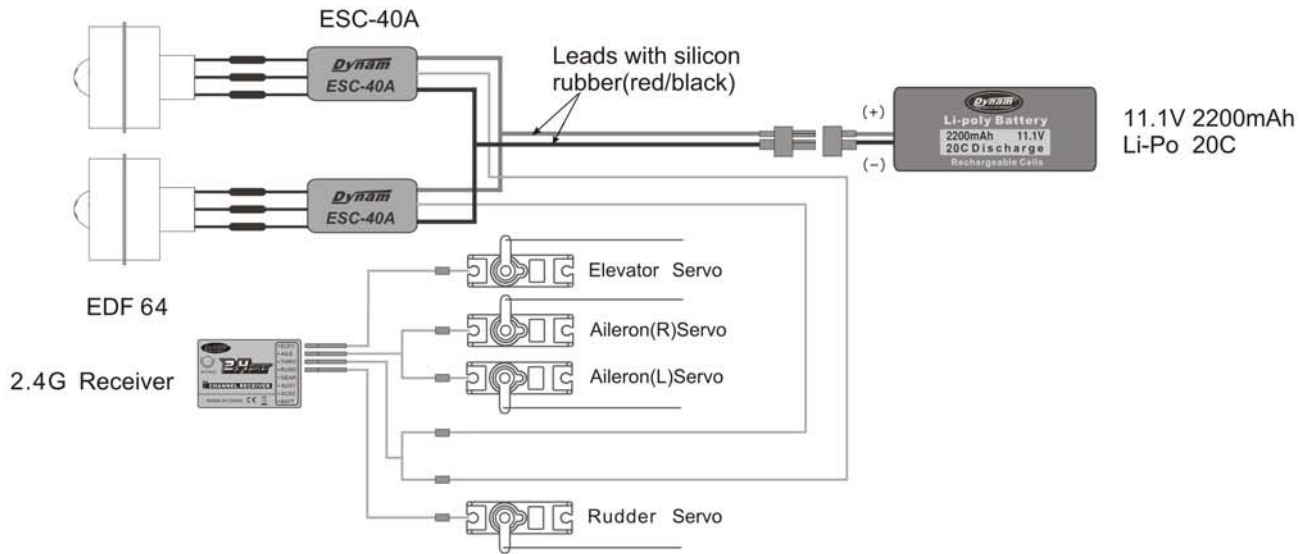


EDF assembly

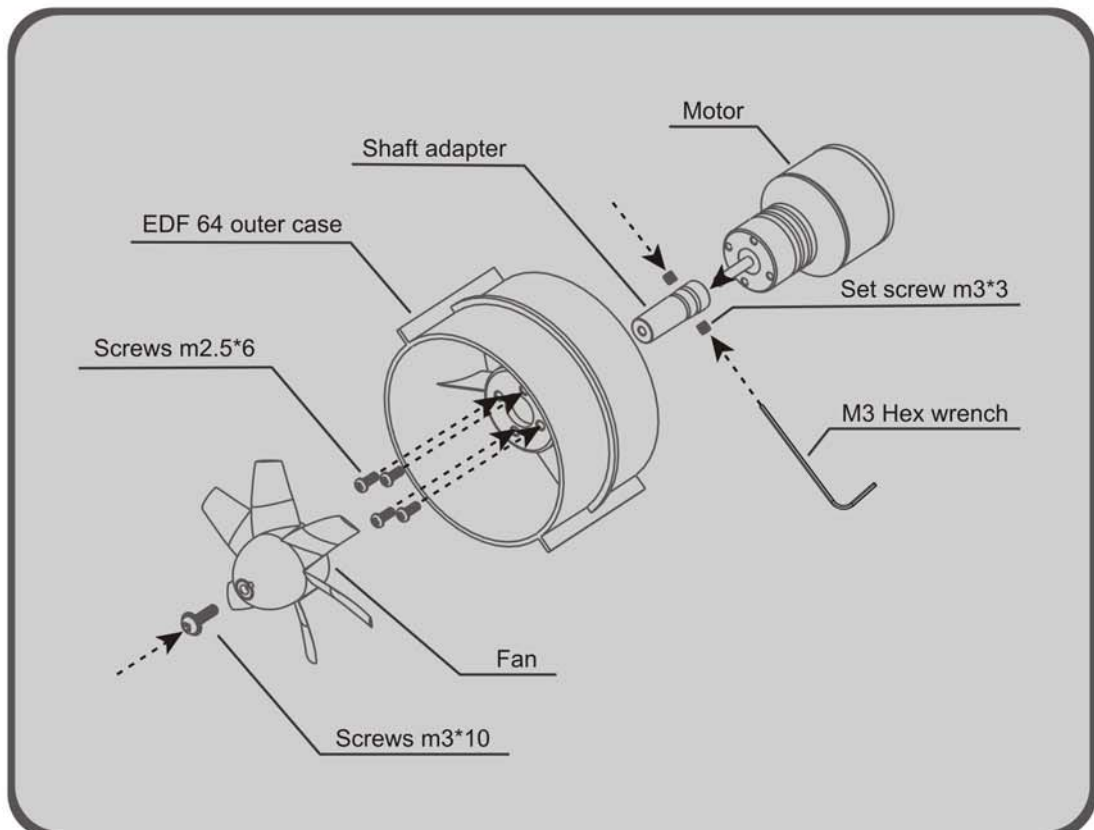

Decal

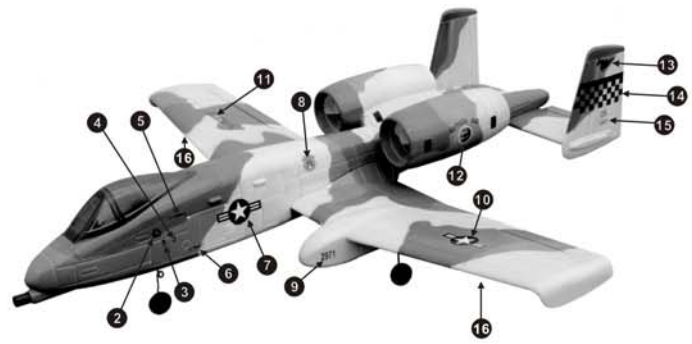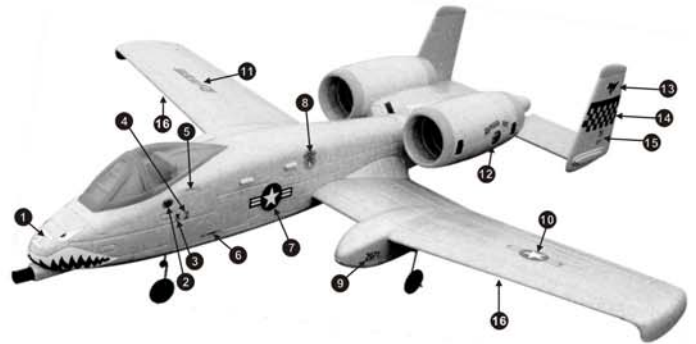

How to open canopy

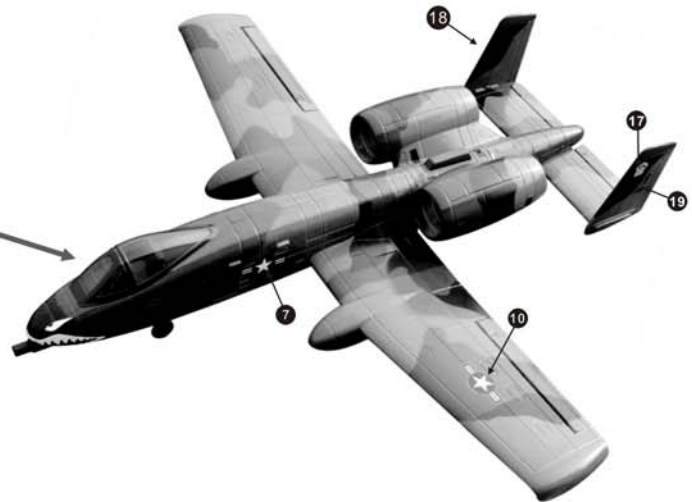


Battery Warning And Charging

Lithium-polymer batteries are a revolutionary new rechargeable battery technology for electric R/C flight, offering a variety of significant advantages over NiCd, NiMH and Li-Ion batteries. It is very important to have a good understanding of the operating characteristics of Li-Po batteries especially their exact rated voltage. Always read the specifications printed on the label of your Li-Po battery prior to use, and read this instruction sheet in its entirety.

WARNING! Lithium-Polymer batteries (Li-Po) are entirely different than NiCd and NiMH batteries and must be handled differently as well!! Failure to follow these care and handling instructions can quickly result in severe, permanent damage to the batteries and its surroundings and even start a FIRE!


- You must charge the Li-Po battery pack in a safe area away from flammable materials.
- Never charge the battery unattended. When charging the battery you should always remain in constant observation to monitor the charging process and react to potential problems that may occur.
- After flight, the battery cool down to ambient temperature before charging.
- Wire lead shorts can cause fire! If you accidentally short the wires, the battery must be placed in a safe area for observation for approximately 15 minutes.

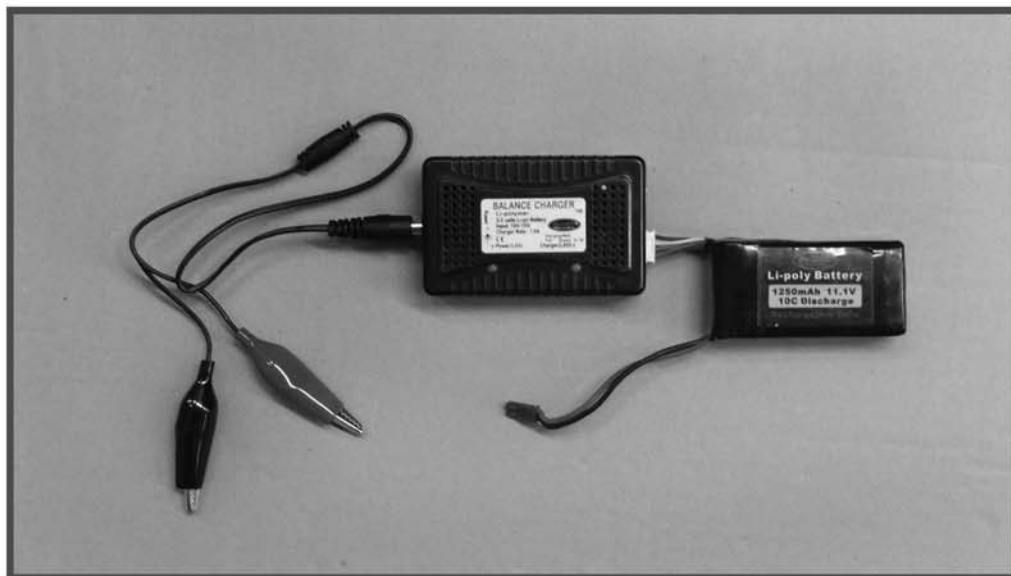

- In the event of a crash, you must quickly and safely disconnect and remove the battery from observation, then place it in a safe, open area away from flammable materials to observe it for at least 15 minutes.
- Store the battery at room temperature for best results.
- Do not over-discharge the battery. Discharging the battery too low can cause damage to the pack resulting in reduced performance and duration.

Battery Warning And Charging

The charger requires up to 1.5 Amps of 10-15 Volt DC input power that can be supplied from a small 12V gel cell or car battery.

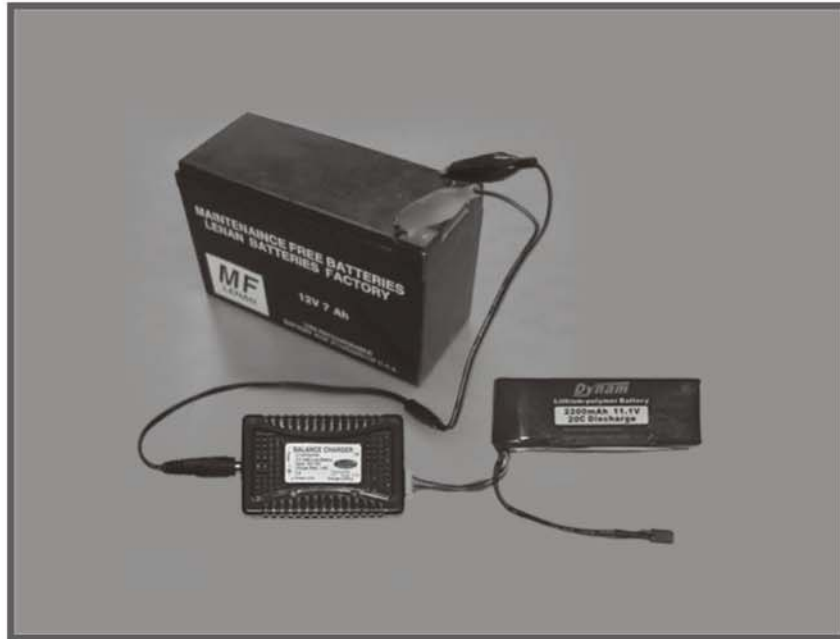


Input power for the charger can also be supplied through the use of an AC to DC adapter/power supply for convenient charging anywhere an AC outlet is available. We recommend the optional AC to 12V DC, 1.5 Amp Power Supply. **NEVER attempt to power the charger from an AC outlet without the use of a proper AC to DC adapter/power supply.**



Battery Warning And Charging

Once you have connected the charger to a power source, The red LED will turn on.
Connect the Li-Po battery pack to the charger, the orange LED will turn on.
When the battery pack is full charged, the green LED will turn on.

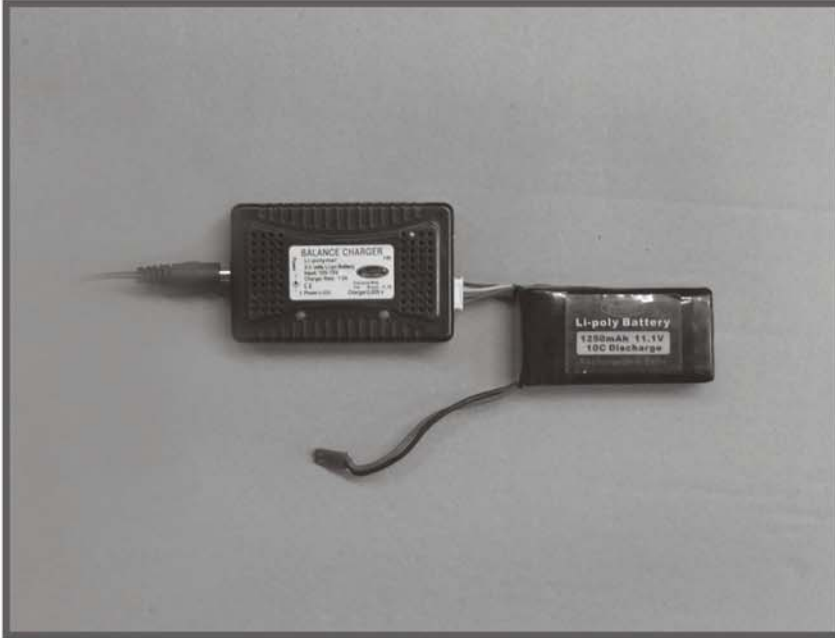

Install the Transmitter Batteries


Install 8 new "AA" batteries in the included transmitter. Check the power level of the batteries and operation of the transmitter by switching the power switch on (upward). The status LEDs at the top of the transmitter will indicate the power level of the batteries. If at any time the status LEDs no longer show green, it will be necessary to replace the batteries with new ones.



Parts List




DYAT-001 Fuselage

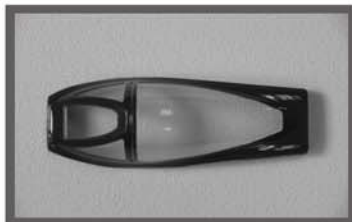

DYAT-002 Canopy



DYAT-003 wing

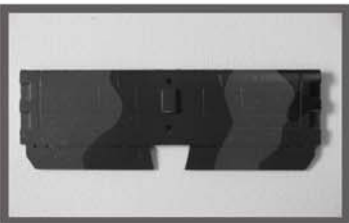


DYAT-004 Elevator



DYAT-005 Vertical stabilizer




DYAT-006 EDF SET

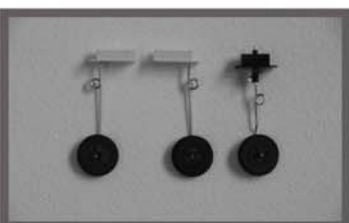

DYAT-007 Landing Gear




DYAT-008 Servo horn

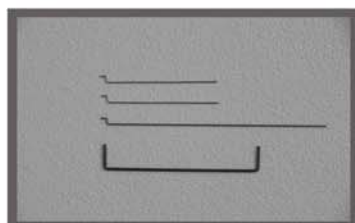

DYAT-009 push rod



DYAT-010 Fixed pieces

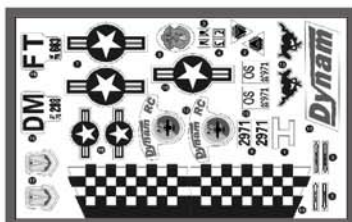

DYAT-011 A-10 Decal



DYAT-3001 quick-controller



DY-3003 Glue




DYM-0010 Brushless Motor



DYA Adaptor



DYE-1004 40A ESC

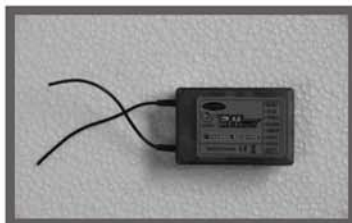

R5P Receiver



DY1007 9g Servo



DYC-1002 Balance Charger



DY-6006 11.1V 2200mAh 20C Li-Po Battery



DYT Transmitter



F-16

INSTRUCTION MANUAL

Specification:

Wingspan: ----- 670mm
 Fuselage length: ----- 1020mm
 Wing loading: ----- 47g/dm²
 Flying weight: ----- 650g
 Servo: ----- 9g
 Battery: ----- 11.1V 2200mAh 15C Li-Po
 ESC: ----- 60A
 Brushless Outrunner Motor: ----- KV:4400
 Ducted fan: ----- EDF 64mm



SKYBUS

INSTRUCTION MANUAL

Specification:

Wingspan:----- 1470mm
 Fuselage length: 980mm
 Wing Area:----- 24.6dm²
 Wing loading: 48.8g/dm²
 Flying weight: 1200g
 Servo: ----- 9g x 4
 Battery: ----- 11.1V 2200mAh 15C Li-Po
 ESC: ----- 40A x 2
 Brushless Outrunner Motor: KV1100



CESSNA EP 400

Specification:

Length..... 30in
Wing Span..... 37.8in
Wing Area..... 15.3dm²
Flying Weight..... 430g
Wing Loading..... 28.1g/dm²

visit our website
www.dynam-rc.com

Dynam
HIGH QUALITY RC PRODUCTS

WWW.DYNAM-RC.COM
SALES: SALES@DYNAM-RC.COM
OEM PRODUCTS: OEM@DYNAM-RC.COM

HOME | PRODUCTS | ABOUT US | NEWS | CONTACT US | DOWNLOAD

2 of 7

2.4GHZ
Radio Control System

PRODUCTS

- RC AIRPLANE
- RC HELICOPTER
- RC SYSTEM
- SERVO
- ESC
- RECEIVER
- BATTERY&CHARGER

ACCESSORIES

- CRYSTAL
- SIMULATOR
- MOTOR
- BLADE

2009 CATALOG
Dynam product list

NEWS

- Airplane: SpitFire
- HELI: E-RAZOR 450
- HELI: Orbiter
- HELI: Bell 47g
- Airplane: Cessna EP

SKYBUS

NEW

Wingspan: 1470mm
Length: 980mm
Wing loading: 48.8g/dm²
Flying weight: 1200g
Servo: 9g*4
Battery: 11.1V 2200mAh 15C

F-16

NEW

Wingspan: 670mm
Fuselage length: 1020mm
Wing loading: 47g/dm²
Flying weight: 650g
Servo: 9g
Battery: 11.1V 2200mAh 15C
ESC: 60A

E-RAZOR 450 (B)

Length: 655mm
Gross Weight: 670g
Main rotor diameter: 720mm
Tail rotor diameter: 135mm
Motor: Brushless 2750KV
Battery: 11.1V 2200mAh Li-Po
Transmitter: FM 6-Channel

E-RAZOR 250

Length: 420mm
Height: 161mm
Main rotor diameter: 438mm
Tail rotor diameter: 105mm
Motor: Brushless 4800KV
Battery: 7.4V 850mAh Li-Po

E-RAZOR 500

Main rotor diameter: 951.5mm
Tail rotor diameter: 191mm
motor: 800KV, 1100W
Mainblade size: 430mm FRP included

Radio Control System

2.4GHz
4ch 6ch Radio

- TEL:+86-769-87566018
- E-mail:sales@dynam-rc.cn
- FAX:+86-769-87555185
- Http:www.dynam-rc.com
- Add:No.C-02 Nanshan Industry Town Yantian Fenggang
City Dongguan Guangdong Province

■ **Shen Zhen Dynam Industry & Trade co., Ltd**